







Engineering progress Enhancing lives

# RAUKANTEX zero-joint edgebands


Technical information



# **RAUKANTEX** zero-joint edgebands

Individuality, design, hygiene and quality play a decisive role in furniture production. The RAUKANTEX edgebands are perfect for all manufacturing processes and application areas, whether it's using adhesives or 100% adhesive-free, for the kitchen, office, living room or bathroom.

You can also obtain the entire edgeband range quickly and in small quantities though our REHAU stock range. You can find more information at www.rehau.com/collection.

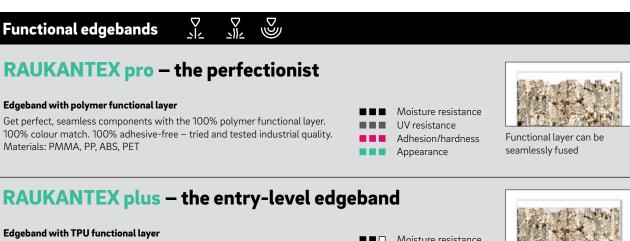

A polymer-based, colour-matched functional layer on the reverse side gives the components a seamless appreance. 100% adhesive-free. Materials: PMMA, ABS The Plus coating is only available in the stock collection.

| Moisture resistance |
|---------------------|
| UV resistance       |
| Adhesion/hardness   |
| Appearance          |
|                     |



Functional layer with barely noticeable joint

#### 2 Adhesive edgebands

## **RAUKANTEX pure – the standard**

#### Primer edgeband

Adhesive is melted before it is applied to the board or edgeband. Materials: PMMA, PP, ABS, PET, PVC

#### **EVA** adhesives

- ■□□ Moisture resistance
- ■□□ UV resistance
- ■ □ Adhesion/hardness
- ■□□ Appearance

#### **PUR** adhesives

- ■ Moisture resistance
- ■□□ UV resistance
- Adhesion/hardness
- ■□□ Appearance



Visible joint depending on adhesive selection

#### 1. Suitability

RAUKANTEX zero-joint edgebands are designed to be processed on edgebanders which use  $CO_2$  or diode laser technology, hot air or a NIR process. For this, the edgebands are provided with a functional bottom layer. Due to the range of parameters that can be

#### 2. Three techniques for invisible joints



#### Laser technology

 During laser processing, a laser activates the edgeband's functional layer.



#### Hot-air technology

Hot compressed air can be used to melt the functional layer during the hot-air process.

Ŵ

www.rehau.com/ti-raukantex

#### NIR technology

encountered (board quality, machine set-up, etc.),

REHAU recommends performing processing tests

relevant technical information of the respective edgeband material for processing details.

prior to the start of manufacture. Please refer to the

Thermal energy can be quickly and precisely transferred with near infra-red technology.

| Designation                             | RAUKANTEX pro   | RAUKANTEX plus   | RAUKANTEX pure                                 |
|---|---|--|--|
| Invisible joint                         | Zero joint technology with colour matched polymer functional layer  | Polymer based functional layer in generic colours  | Can only be implemented with coloured adhesive |
| Zero joint quality                      |   |  | EVA / PUR                                      |
| Edgeband adhesion                       | •••   |  | EVA<br>PUR                                     |
| UV stability                            |   |  | EVA / PUR                                      |
| Heat resistance according to AMK edging |   |  | EVA<br>PUR                                     |
| Processing procedure                    | One edgeband for all zero joint<br>technologies<br>(NOTE if it says 'all technologies' it<br>could be read to include adhesive) | One edgeband for all zero joint<br>technologies<br>(NOTE if it says 'all technologies'<br>it could be read to include<br>adhesive) | Adhesive applied by machine                    |
| Excellent                               | ood 📕 🗆 🗆 Limited   |  |  |

#### 3. General processing instructions

The edgebands to be processed must be acclimatised at normal room temperature (> 18 °C). It is recommended that the boxes are opened. During processing, suitable extraction must be ensured. Subject to the technical instructions on air quality, extracted air can be discharged into the surroundings – local conditions and regulations must be checked in each case. In the case of clean air recirculation, dust particles and gaseous components must be filtered appropriately. The specifications from the machine and filter manufacturer must be observed here. For further instructions and guidelines on optimal processing of RAUKANTEX edgebands, separate processing instructions specific to the material are available from REHAU.

#### 4. Storage

If stored properly, RAUKANTEX edgebands can be stored for min. 12 months. For edgebands older than 12 months, however, a processing trial should always be carried out prior to series processing.

Recommended storage conditions are:

- Room temperature (approx. 18 °C to 25 °C)
- Dry
- Clean
- No vapours containing solvents
- Protected from light

### 5. Processing parameters for laser process

#### 기 고

The specific energy recommended by REHAU should be used for the processing of RAUKANTEX zero-joint edgebands (plus and pro) with diode lasers. The so-called E<sub>spec.</sub> [J/cm<sup>2</sup>] is a value that is determined metrologically (at REHAU max. E<sub>spec.</sub> = 26 J/cm<sup>2</sup>), and which specifies the required energy per area depending on colour. The Espec. is printed on the inside label of every REHAU roll and is available in customer specific list form if required for production planning. These specifications apply to straight-line edgebanders. For CNC processing centres (for free formed parts), the values should be adjusted to suit the individual machine (in the case of HOMAG and IMA processing centres, since mid-2015, the same  $E_{spec}$  has been used as for straight line edgebanders). When using a CO<sub>2</sub> laser, the specifications of the required laser power [W] depending on the edge width and feed rate must be requested from REHAU. Processing of RAUKANTEX pro or plus in PVC material using laser technology is not authorised.

#### 6. Processing parameters for hot air

The recommendations for machine settings are based on processing on a straight-line edgebander, when edging 19 mm substrate with the specified feed rates. The main pressure roller should be at 2.5–3 bar (approx. 20–25 kg). In case of deviation, the machine parameters must be adjusted in consultation with the respective machine manufacturer or REHAU.



| HOMAG<br>RAUKANTEX plus<br>Next Generation TPU<br>Parameter | <b>S200/S240</b><br>(KDX1100/1200) | <b>S300</b><br>(KDX1400) | <b>S-380</b><br>(KDX1600)             | <b>S-500</b><br>(KAX375) | BAZ power edge<br>pro duo |
|---|------------------------------------|--------------------------|---------------------------------------|--------------------------|---------------------------|
| Feed  | 8 m/min.                           | 14 m/min.                | 20 m/min.                             | Up to 25 m/min.          | Software-controlled       |
| Temperature   | 450 °C                             | 650 °C                   | 650 °C                                | 650 °C                   | 140 °C                    |
| Pressure (flow rate) ball valve 23 mm                       | Fixed                              | 2 bar (680 Nl/min.)      | 3.5 bar (1,040 Nl/min.)               | 2 bar (650 Nl/min.)      | Software-controlled       |
| Pressure (flow rate) ball valve 43 mm                       | Fixed                              | 3.5 bar (1,040 Nl/min.)  | 4 bar (1,150 Nl/min.)<br>At 16 m/min. | 4 bar (1,300 Nl/min.)    | Software-controlled       |

| HOMAG<br>RAUKANTEX pro<br>Parameter   | <b>S200/S240</b><br>(KDX1100/1200) | <b>S300</b><br>(KDX1400) | <b>S-380</b><br>(KDX1600)               | <b>S-500</b><br>(KAX375) | BAZ power edge<br>pro duo |
|---------------------------------------|------------------------------------|--------------------------|---|--------------------------|---------------------------|
| Feed                                  | 8 m/min.                           | 14 m/min.                | 20 m/min.                               | 20 m/min.                | Software-controlled       |
| Temperature                           | 450 °C                             | 650 °C                   | 650 °C                                  | 650 °C                   | 180 °C                    |
| Pressure (flow rate) ball valve 23 mm | Fixed                              | 3 bar (900 Nl/min.)      | 4 bar (1,150 Nl/min.)                   | 2.5 bar (800 Nl/min.)    | Software-controlled       |
| Pressure (flow rate) ball valve 43 mm | Fixed                              | 4.5 bar (1,290 Nl/min.)  | 4.5 bar (1,290 Nl/min.)<br>At 16 m/min. | 4.5 bar (1,550 Nl/min.)  | Software-controlled       |

| BIESSE AirForce        | P½ (Akron) up to 18 m/min |            | P¾ (Stream) up to 25 m/min |            |
|------------------------|---------------------------|------------|----------------------------|------------|
| Parameters             | pro                       | plus       | pro                        | plus       |
| Nozzle temperature     | 480 °C                    | 340 °C     | 580 °C                     | 370 °C     |
| Air quantity           | 1,100 Nl/min              | 750 Nl/min | 1,100 Nl/min               | 750 Nl/min |
| HEBROCK airTronic      | V <sub>f</sub> = 10 m/min |            |                            |            |
| Parameters             | pro                       |            | plus                       |            |
| Unit temperature       | 450 °C                    |            | 375 °C                     |            |
| Air quantity           | 480 Nl/min                |            | 370 Nl/min                 |            |
| FELDER                 | $V_f = 12 \text{ m/min}$  |            |                            |            |
| Parameters             | pro                       |            | plus                       |            |
| Nozzle temperature     | 320 °C                    |            | 285 °C                     |            |
| Air heater temperature | 610 °C                    |            | 560 °C                     |            |
| Air quantity           | 740 Nl/min                |            | 620 Nl/min                 |            |

Other values on request.

| SCM                | AirFusion (15 m/min.) |               | AirFusion+ (30 m/min.) |              |
|--------------------|-----------------------|---------------|------------------------|--------------|
| Parameters         | pro                   | plus          | pro                    | plus         |
| Nozzle temperature | 580 °C                | 450 °C        | 650 °C                 | 490 °C       |
| Air quantity       | 750 Nl/min.           | 660 Nl/min.   | 1,400 Nl/min.          | 980 Nl/min.  |
| SCHUGOMA*          | 1st generation        | until 12/2024 | 2nd generation         | from 01/2025 |
| Parameters         | pro                   | plus          | pro                    | plus         |
| Nozzle temperature | 410 °C                | 410 °C        | 420 °C                 | 420 °C       |
| Air quantity       | 750 Nl/min            | 600 Nl/min    | 650 Nl/min             | 520 Nl/min   |

\*Schugoma retrofits existing edgebanders with the Hot-Air-System and does not manufacture any edgebanding machines itself.

For all other hot-air sources on the market, the setting parameters must be requested from the respective manufacturer. RAUKANTEX pro or plus in PVC material can be processed using the hot air method.

#### **General comment:**

When using RAUKANTEX pro in the OMR and the OFL versions, the specified performance can be reduced by approx. 10–20.

#### 7. Processing parameters for NIR process



The NIR technology works in a wavelength range close to the diode laser and is based on the activation of absorbers. An edgeband calculator provided by the machine manufacturer is available for the individual setting of processing parameters, with the help of which it is possible to convert the specific energy values  $E_{spez.}$  [J/cm<sup>2</sup>] of RAUKANTEX edgebands (plus and pro) recommended by REHAU into device-specific performance values [kW].

If entering  $E_{spez.}$  is not possible, the following reference values are applicable for a feed of 18 m/min. and a 19 mm board: 13 J/cm<sup>2</sup> = 3.3 kW 26 J/cm<sup>2</sup> = 6 kW

#### 8. Surface

#### Surface smoothness

Due to the high energy input using the zero-joint procedure, processing RAUKANTEX pro on chipboards can lead to a rough edgeband surface.

Energy input into the functional layer conducts into the edge of the chipboard material, and depending on the edgeband thickness (<1.5mm), and edgeband surface finish (where the glossier the more critical) the chipboard structure can telegraph through to the surface of the processed edgeband. In these cases we recommend the use of special functional layers after consultation with the REHAU technical application department. This effect is not critical for application on MDF boards.

### 9. Frequently asked questions

Laser technology:

| Problem   | Problem diagnosis  |  |  |
|---|--|--|--|
| 1 Open joints on long edge                          | <ul> <li>Incorrect laser coverage setting</li> <li>Incorrect pressure zone setting</li> <li>Angularity of form trimming</li> </ul>   |  |  |
| 2 Open joint in corner                              | <ul> <li>Edge and board feed not synchronised</li> <li>Edge overhang too long/short</li> <li>Laser radiation start/end not correct</li> </ul>  |  |  |
| 3 Too little adhesion / peel strength               | <ul> <li>Functional layer thickness outside tolerance</li> <li>Pressure zone setting incorrect (lifting, pressure)</li> <li>Energy specification not compatible with the edge</li> </ul> |  |  |
| 4 Functional layer burns /<br>heavy smoke formation | <ul><li>Energy specification not compatible with the edge</li><li>Dirty or missing functional layer</li></ul>  |  |  |
| 5 Edge jams in the guide                            | <ul> <li>Longitudinal warping or width fluctuation of the edge</li> <li>Retaining device set too low</li> <li>Tape magazine tension too high (especially for RAUKANTEX plus)</li> </ul>  |  |  |
| 6 Machine temperature sensor switches off           | <ul><li>Incorrect laser coverage setting</li><li>Laser penetration due to insufficient colouring of the edge</li></ul>   |  |  |

### Hot-air technology:

| Problem                                | Problem diagnosis  |  |  |
|--|--|--|--|
| 1 Open joints on long edge             | <ul><li>Pressure setting too low</li><li>Incorrect pressure zone setting</li><li>Angularity of form trimming</li></ul>   |  |  |
| 2 Open joint in corner                 | <ul> <li>Edge and board feed not synchronised</li> <li>Edgeband overhang too long or too short</li> <li>Start/end of hot-air application incorrect</li> </ul>  |  |  |
| 3 Too little adhesion / peel strength  | <ul> <li>Functional layer thickness outside tolerance</li> <li>Pressure zone setting incorrect</li> <li>Energy specification not compatible with the edge coating</li> </ul>   |  |  |
| 4 Functional layer smudged             | <ul> <li>Temperature setting not compatible with the edge<br/>(correct specifications for RAUKANTEX pro or plus)</li> <li>Nozzle pressure too high</li> </ul>  |  |  |
| 5 Edge jams in the guide               | <ul> <li>Longitudinal warping or width fluctuation of the edge</li> <li>Retaining device set too low</li> <li>Functional layer "jams" on edge guide<br/>(pull edge back during work breaks)</li> <li>Tape magazine tension too high (especially for RAUKANTEX plus)</li> </ul> |  |  |
| 6 Machine pressure sensor switches off | Check compressed air supply  |  |  |

This document is protected by copyright. All rights based on this are reserved. No part of this publication may be translated, reproduced or transmitted in any form or by any similar means, electronic or mechanical, photocopying, recording or otherwise, or stored in a data retrieval system.

Our verbal and written advice with regard to usage is based on years of experience and standardised assumptions and is provided to the best of our knowledge. The intended use of REHAU products is described comprehensively in the technical product information. The latest version can be viewed at www.rehau.com/TI. We have no control over the application, use or processing of the products. Responsibility for these activities therefore remains entirely with the respective user/ processor. Where claims for liability nonetheless arise, they shall be governed exclusively according to our terms and conditions, available at www.rehau.com/conditions, insofar as nothing else has been agreed upon with REHAU in writing. This shall also apply for all warranty claims, with the warranty applying to the consistent quality of our products in accordance with our specifications. Subject to technical changes.

www.rehau.com/locations

© REHAU Industries SE & Co. KG Helmut-Wagner-Straße 1 95111 Rehau, Germany

M01675 EN 01.2025